

IMPORTANT INFORMATION

IMPORTANT! Read this information before proceeding. It is the user's responsibility to take the following precautions at all times.

- Always stake or weigh down your shelter. Do not use in any potentially windy or rainy weather.
Wind and rain can damage the E-Z UP® Instant Shelter® product and may also result in injury to you or others. Therefore, do not rely on shelter for protection in heavy or prolonged rain storms.
- The E-Z UP® Instant Shelter® product is designed as a temporary shelter. Do not leave up for extended periods.
- Use caution when handling the E-Z UP® folding frame. Avoid pinching hands or fingers as frame opens or closes.
- Do not use shelter in a lightning storm.
- Do not leave your E-Z UP® Instant Shelter® product unattended.
- Do not build fires within shelter enclosure.

WARNING: Keep all flame and heat sources away from all shelter fabrics. These fabrics meet the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective.

CARE AND MAINTENANCE

For long lasting durability and the best possible protection for your E-Z UP® Instant Shelter® products, follow these E-Z care and maintenance instructions:

- Use a mild soap (not detergent) and plenty of water for top cleaning.
- Let the E-Z UP® top and frame dry completely before closing or storing to avoid mildew.
- Frame will operate and look better if occasionally wiped with silicone spray, especially before and after use in damp conditions. Remove excess silicone residue before applying top.
- Use a seam sealer if top leaks or drips water. Available at most sporting goods and hardware stores.
- Slightly tighten bolts if frame becomes loose.

ezup.com



PRODUCT WARRANTY

INTERNATIONAL E-Z UP, INC., manufacturer of E-Z UP® Instant Shelter® products, warrants to the original purchaser who provides a dated sales receipt, from an Authorized Dealer, each part of the E-Z UP® Instant Shelter® product to be free from defects in material or workmanship for a period of **FIVE YEARS** after the date of original purchase. This warranty applies only for normal and expected uses, as determined by the manufacturer. INTERNATIONAL E-Z UP, INC.'s obligation and liability under this warranty is limited to the repair or replacement (at its option) of the product or its parts, after its own review and examination.

RETURN ADVISORY - Before returning any part or product to INTERNATIONAL E-Z UP, INC. or its designated representative, please phone or write to obtain specific return shipping instructions. All shipping costs must be prepaid, and INTERNATIONAL E-Z UP, INC. is not responsible for products damaged in transit.

CONDITIONS - This warranty shall be void as to any product which has been altered or modified in any manner. This warranty does not apply to damages caused by wind, rain, or other forces of nature, not to accidental or deliberate damage of the product, nor to use of the product that does not conform with the product instructions.

This warranty is provided in lieu of all other warranties, expressed or implied.

ezup.com

We Make Life E-Z!
INTERNATIONAL E-Z UP, INC.

1900 Second Street, Norco, California 92860
(951) 279-0999 • Fax (951) 279-0888

ezup.com

Customer Service Hot Line
800-45 SHADE
8 0 0 - 4 5 7 - 4 2 3 3

E-Z UP® INSTANT SHELTER®



"Sets Up in Seconds!"™

ECLIPSE II™
Professional

8' x 8' (2.5m x 2.5m)
10' x 10' (3.0m x 3.0m)
10' x 15' (3.0m x 4.5m)

With proper care, this shelter will deliver years of trouble free service. Please take a few minutes to read the following use and care instructions. If you have any questions or require assistance, please call.



Customer Service Hot Line

800-45 SHADE
8 0 0 - 4 5 7 - 4 2 3 3

ezup.com

OWNER'S MANUAL

INSTRUCTIONS

Please read each step before you attempt to set up.
Save these instructions for future reference.

FIRST TIME TOP ATTACHMENT

*Note: First Time Attachment Is Required.

Top and frame are shipped separately to avoid damage. A first time set up requires that top be bolted on to the frame. This first time set up takes longer than future set ups. Once top is permanently attached to frame, set up and take down are easily accomplished within seconds.



***4.** To secure the top to frame, line up grommet holes on valance with the bolts on frame.




8. Lift two adjacent outer legs up 1" and slide out the inner legs until the toggle button locks. Repeat on the opposite legs - make sure to do two legs at a time.

Note: Once top is permanently attached, only perform steps 1 and 6 - 8 to set up.



***1.** Place your E-Z UP® frame in the center of area to be sheltered. With partner on opposite side, grasp two outer legs, slightly lift off ground and step backwards, stopping at full arms' length - approximately 3/4 its total size.

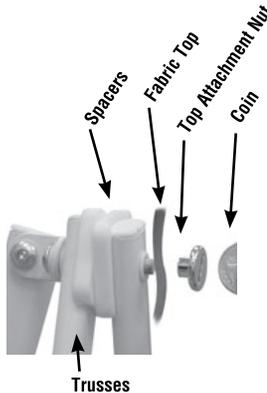

***5.** Unscrew top attachment nut from bolt. Place grommeted fabric top over the bolt, screw on top attachment nut and tighten until snug. **Top should rotate easily - do not over-tighten.** Repeat this procedure on the remaining grommets.

How To TAKE DOWN




1. With partner, slightly lift up two adjacent outer legs 1", depress toggle button and telescope inner legs into outer legs. Repeat on the opposite legs - making sure to do two legs at a time.



***2.** Gently unfold the fabric top and place it over the open frame.




6. Grasp the bottom of the diamond shaped area of trusses on opposite sides. Lift up and step backwards until shelter is fully opened, **being careful not to pinch fingers.**

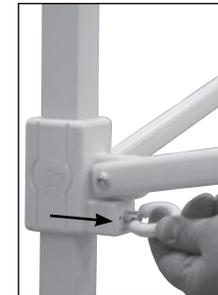

2. Release the Auto Slider® at each corner by first lifting hem of top. With one hand, push up on truss near slider, release quick pin by pulling ring.



***3.** Attach the top to the E-Z UP® frame by matching the quick attachment strips on the top with the quick attachment strips on the frame. Pull the corners down fully. Push the strips firmly together at each corner.

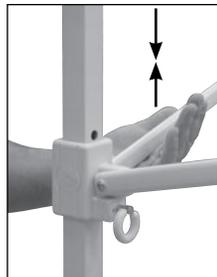

7. Engage the Auto Slider® at each corner by pushing up with one hand while holding down the top of the leg with the other hand. The quick pin will engage the hole. Then pull down the hem of the top. Repeat at all four corners.



3. Grasp the top diamond on opposite sides by "close" sticker. Lift the shelter up slightly and shake it while stepping towards your partner until the unit is 3/4 closed. With each partner grasping two outer legs, push frame together to fully close it - Be careful not to pinch fingers. Store shelter in cover bag.